

Chyron Keyboard Guide: Advanced Keyboard V2

Document Version 1.0



Chyron Keyboard Guide: Advanced Keyboard V2 User Guide • 4.10.7 • January 2025 • This document is distributed by Chyron in online (electronic) form only, and is not available for purchase in printed form.

This document is protected under copyright law. An authorized licensee of Chyron Keyboard Guide: Advanced Keyboard V2 may reproduce this publication for the licensee's own use in learning how to use the software. This document may not be reproduced or distributed, in whole or in part, for commercial purposes, such as selling copies of this document or providing support or educational services to others.

Product specifications are subject to change without notice and this document does not represent a commitment or guarantee on the part of Chyron and associated parties. This product is subject to the terms and conditions of Chyron's software license agreement. The product may only be used in accordance with the license agreement.

Any third-party software mentioned, described or referenced in this guide is the property of its respective owner. Instructions and descriptions of third-party software is for informational purposes only, as related to Chyron products and does not imply ownership, authority or guarantee of any kind by Chyron and associated parties.

This document is supplied as a guide for Chyron Keyboard Guide: Advanced Keyboard V2. Reasonable care has been taken in preparing the information it contains. However, this document may contain omissions, technical inaccuracies, or typographical errors. Chyron and associated companies do not accept responsibility of any kind for customers' losses due to the use of this document. Product specifications are subject to change without notice.

Copyright © 2025 Chyron, ChyronHego Corp. and its licensors. All rights reserved.



Table of Contents

Description	4
Software components required	4
Advanced Keyboard Manager	4
Configure	4
Back Lighting and Power Save	5
Power Save timeouts	5
Logging level	6
About	6
Flex Keys and Banks	7
Gray Keys	7
Main LCD Display	7
Add Keyboard Device to Prime Application	8
Editor Flex Keys Design and Configuration	9
Behavior	11
Enabled	11
Broadcast Key Press	11
Allow Override	11
Appearance	11
Events	12
Bank DropDown	13
Open Bank Xml	13
Save Bank Xml	13
Live Preview	14
Right Click Key Context Menu	14
Broadcast Key Press: Multiple Listener	14
Project Level	15
Scene Level	15
Allow Override: Deny	16
Project Level	16
Scene Level	17
Switching Flex Key Banks	18
Flex Key Behaviors	19
Example 1	19
Example 2	20



Description

Requires Prime 3.5 or greater

The **Chyron Advanced keyboard** is a physical device that communicates with the outside world over USB. In fact, the keyboard consists of several USB devices:

- A large LCD
- An additional keypad
- 4 banks of 21 smaller LCD keys for a total of 84 assignable keys
- A standard QWERTY keyboard
- A power cable
- A USB cable
- A USB port

Software components required

Requires Prime 3.5 or greater.


Requires "Advanced Keyboard Manager.exe" to be running in the system tray. Version 2.0.3 or greater.

Advanced Keyboard Manager

The Advanced Keyboard Manager should be running in the system tray.

Right click on it to access the available menus.


Configure






Back Lighting and Power Save

These controls will adjust the global keyboard settings.

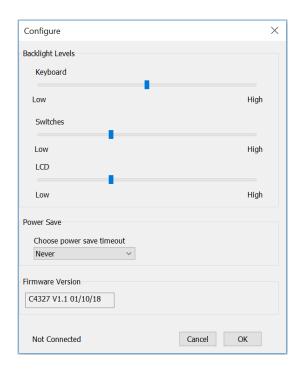


Power Save timeouts

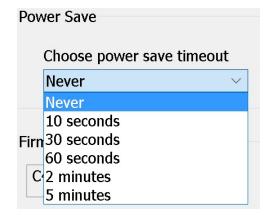



Logging level

Set logging to "Off" under normal operation. Chyron support may ask to set it to a different logging level as a diagnostic tool.

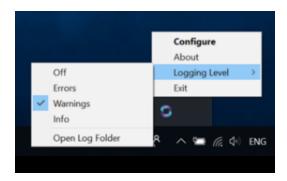

About

The About dialog shows the current version of the Keyboard Manager.





Flex Keys and Banks

There are 4 banks of 21 LCD Flex keys for a total of 84 assignable Flex keys...

The topmost and leftmost keys can be individually designed. Key Press (Up and Down) commands can be assigned to these keys using the Advanced Keyboard Configuration Dialog.



Gray Keys

The gray keys are hard-coded for standard graphics playback operation.


Main LCD Display

Not implemented in V2 of the Keyboard. The resolution is 128 x 64.



Add Keyboard Device to Prime Application

- Go to Config Devices.
- Click on Advanced Keyboard to Add Advanced Keyboard Device
- Prime need to run as Administrator to run and use Advanced Keyboard Device

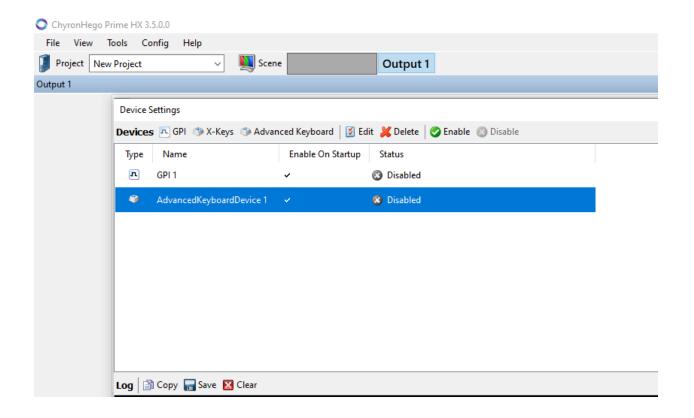


Device only needs to be added for Playout, designing of flex keys and assigning events can be done through editor without the need to add keyboard device.



Editor Flex Keys Design and Configuration

Configure Flex Keys look and Keypress events, a Keyboard Bank resource is added to the Scene or Project file.

- The Keyboard Bank resource is added under a Resource section of Scene Tree.
- The view bank of the bank is shown in a separate dialog.
- User can select keys to configure either by clicking Keys in Scene Tree or on Keyboard Bank Dialog

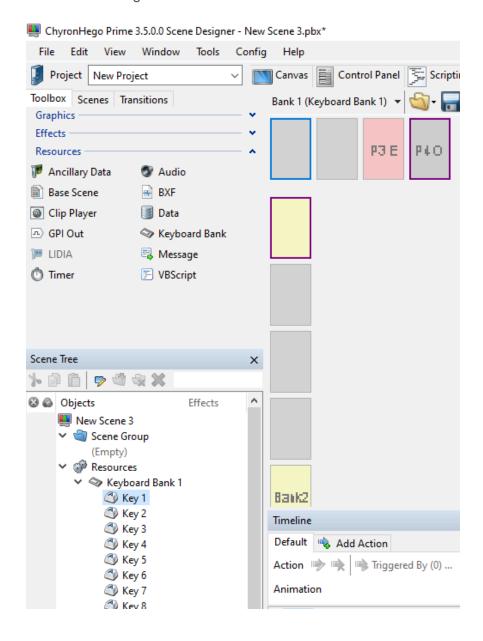




*Keyboard Bank resource is available under the Resource section of Scene Editor's Toolbox.

Each flex key can be custom-designed with text, color and/or an image.

Flex keys have two levels of hierarchy

- 1. Project
- 2. Scene

See Key Scope below.

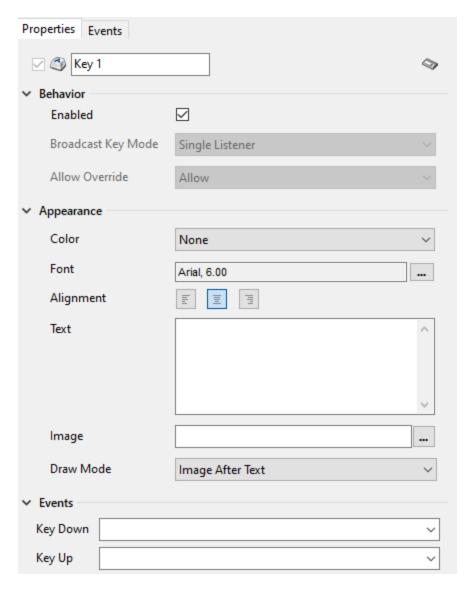

The selected Key can configured using the properties window



Behavior

Enabled

Enables the key and allows the Project or a Scene to listen for key press events. *Appearance* and Events can only be configured if the key is enabled.

Broadcast Key Press

- **Single Listener:** Key Up and Down events are only broadcast to one listener (Single Scene or Project).
- Multiple Listener: Key Up and Down events are broadcast to all available listeners (All Scenes on Output and the Project). The "Allow Override" option is disabled in this mode and set to deny. See Multiple Listener Mode in detail below.

Only available in Project Editor configuration.

Allow Override

- Allow: Allows the key's appearance and commands to be configured by a scene (depending upon which scene is selected).
- Deny: This key's appearance and commands cannot be overridden at the scene level.
 This key becomes exclusive to Project.. Exception: See Broadcast Press Multiple
 Listener. See Allow Override: Deny in detail below.


Only available in Project Editor configuration.

Appearance

- Color: Background Color for the key. Choices are Red, Green, Yellow and Off.
- **Font:** The font facename, style and size for the text on the key.
- Alignment: Justification of the text on the key. Choices are Left, Center or Right
- **Text:** Text to be shown on the key.
- **Image:** Filename of an image to appear on the key. Image is black and white with a maximum resolution of 24x36 pixels. Supported image formats are PNG or BMP.
- Draw Mode: Position of the image with respect to the text. Choices are Image After Text or Image Before Text.



Events

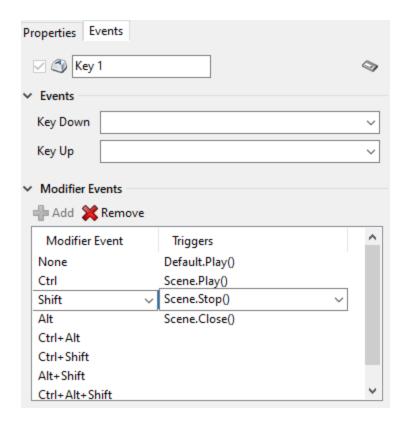

Actions can be triggered when key events occur (keys are pressed and/or released) Assignable in both Project and Scene levels.

Executes a specific function or set of functions.

Ex: "Clear", "Activate Action", "Bank 2: Activate"

Key Down: assign the Trigger Action(s) to execute when this key is pressed.

Key Up: assign the Trigger Action(s) to execute when this key is released.

Modifier Events


In addition to Key Down and Key Up, KeyDown events with different Modifier Keys (Ctrl,Alt,Shift). Assign Trigger to different Modifier Keys combination.

*KeyDown Event occurs, if user presses modifier keys with Key Press, but didn't add Modifier Event for that key combination



Keyboard Bank Dialog

Representation of Bank Layout. Also allow user to Select Keys

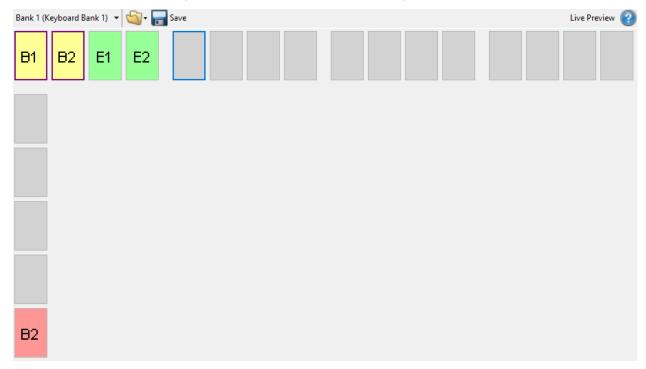

Bank DropDown

- Shows to which bank of keyboard, bank resource is assigned.
- Clicking on DropDown items allow to move the bank resource to available(empty) bank or swap bank resources (if another bank resource is already assigned to clicked bank)
 Actions can be triggered when key events occur (keys are pressed and/or released)

Open Bank Xml

- Load: Load Keyboard Bank xml and override all configured keys. (Appearance only)
- Append: Load Keyboard Bank xml and only override the keys that are not configured.(Appearance only)

Save Bank Xml


Save the Bank Resource as Xml to loaded into different keyboard bank. (Only Appearance is saved, not the events)



Live Preview

Show live preview of the currently selected bank in the Editor on the Physical Keyboard

Right Click Key Context Menu

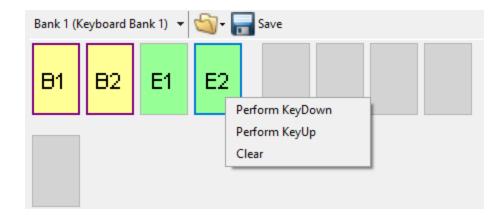

Perform KeyDown: Executes Trigger Action that should trigger when the key is pressed.

Perform KeyUp: Executes Trigger Action that should trigger when the key is released.

Clear: Resets the Key. This will disable the key, restore all **Appearance** settings to their default values

Broadcast Key Press: Multiple Listener

In Multiple Listener Mode:


- Key Up and Down events are broadcast to all available listeners. All the Scenes that are on output and the Project can react to the events.
- The key will be highlighted with a purple border around it.
- The Allow Override option is disabled and set to deny.
- Key Appearance can only be set at the Project Level. At the Scene level, the key appearance controls are disabled, the appearance settings as set at the Project level are shown on the key, and a broadcast key indicator is also shown.
- Any scene can react to key press events. Once the key is enabled at the Scene level,
 Events can be added in Events Section

In the screenshots below. Key 1 (B1) and Key 2 (B2) are marked as Multiple Listeners



Project Level


- Purple Border around B1 and B2
- Allow Override is disabled
- Events can be added to react to key press events.

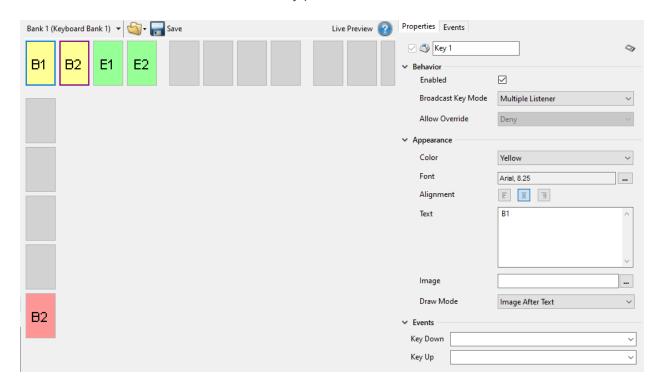

Scene Level

- Scene keys can hook up to a key if the Broadcast Key Press mode is set to Multiple
 Listener by enabling the key and adding Events to react to key press events
- Key Appearance controls are disabled as scenes cannot override the appearance.
- If a scene already has commands assigned to a specific key and subsequently you
 change the *Broadcast Key Press mode* to Multiple Listener at the Project Level, the
 scene commands will automatically be hooked up to it.
- The appearance of the key as set at the project level is shown in the User Interface with a purple border around it.



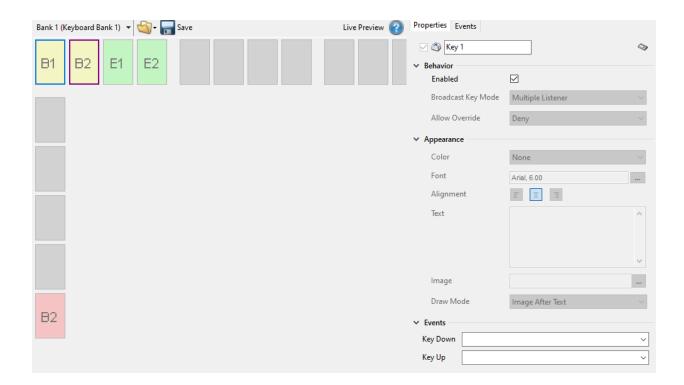

Allow Override: Deny


- A key becomes exclusive to the Project if Allow Override is set to Deny while Broadcast Key Press Mode is set to Single Listener.
- Appearance and Events can only be set at the project level. The Scene's configuration settings are disabled.

Images below: Key 3 (E1) and Key 4 (E2) are marked with Allow Override Deny option.

Project Level

- Both Appearance and Events can be configured
- Broadcast Key Mode is set to Single Listener




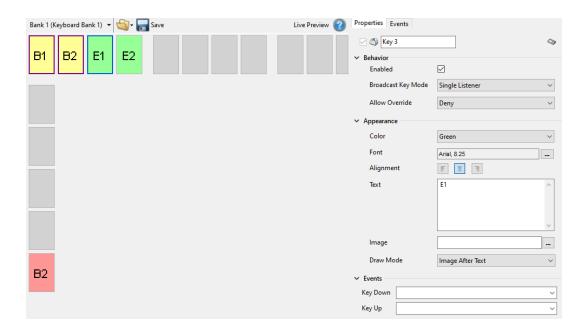

Scene Level

- All the Key Properties are disabled for that key
- If the Scene had a set appearance and events were assigned to a specific key and subsequently Allow Override is changed to Deny at the ProjectLevel, the scene key configuration will be disabled.



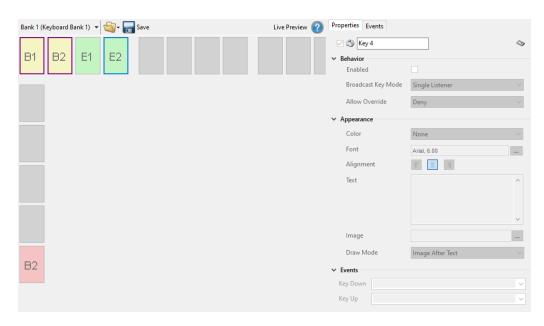

A preview of the appearance as set at the Project level is shown on the key...


Switching Flex Key Banks

There are four banks of 21 user assignable flex keys. Switching banks can be achieved by assigning Keyboard Bank to Activate on KeyDown or KeyUp. Only the banks that are assigned Keyboard Bank Resource's can be activated

In the screenshot below, Bank 1 with "Keyboard Bank 1" Resource's Key 21(Red B2) is assigned to activate KeyboardBank2 Resource (assigned to Bank2) on Key Down.

Pressing the Bank 1's Key 21 will activate Keyboard Bank2 Resource and switch to Bank2



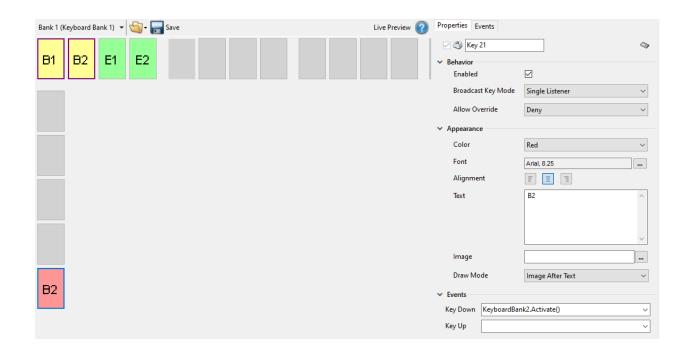

Flex Key Behaviors

Scenes have first priority to respond to a keypress. If a key is assigned in multiple scenes, the output scene that has focus will have priority. If the key is not assigned in any scene currently on output, then the key will revert to what was configured at the Project level.

Example 1

Project Key 1

• Appearance: "Clear" Text

• Broadcast Key Mode: Single Listener

• Allow Override: Allow

• Key Down Event: Scene:Clear

Scene 100 Key 1

Appearance: "Bug On" Text

• Key Down Event Command: Activate Action"Bug On"

Scene 200 Key 1:

Appearance: "Clock On" Text

Key Down Event Command: Activate Action"Clock On"



Scene 100 is on output

When Scene 100 is opened and played to air on Program, Key 1 will display "Bug On". The Appearance of the key is under control of Scene 100 as long as it remains on output.

Pressing Key 1 will activate the action "Bug On" as long as scene 100 is on air.

Once Scene 100 is cleared from output, Key 1 reverts back to the Appearance set at the Project level ("Clear").

Scenes 100 and 200 on output

With Scene 100 on the output of Program, Scene 200 is opened and played to Program. In this scenario. the keyboard keys are in context to the scene that has focus. If Scene 100 has focus, Key 1 will activate "Bug On" and Display "Bug On". If Scene 2 has focus, it will activate "Clock On" and display "Clock On"

When both Scene 100 and Scene 200 are cleared from program, key 1 will revert back to the appearance at the project level ("Clear").

Example 2

Project Key 2

• Appearance: "Play Actions" Text

• Broadcast Key Mode: Multiple Listener

Scene 100 Key 2

Key Down Event Command: Activate Action"Bug On"

Scene 200 Key 2:

• Key Down Event Command: Activate Action "Clock On"

The Appearance of this key cannot be changed at the scene level and will always say "Play Actions". However, any scene can react to this key by adding events at the scene level. When the key is pressed, both the "Bug On" action of Scene 1 and "Clock On" action of Scene 2 will be activated.



ABOUT US

Chyron is ushering in the next generation of storytelling in the digital age. Founded in 1966, the company pioneered broadcast titling and graphics systems. With a strong foundation built on over 50 years of innovation and efficiency, the name Chyron is synonymous with broadcast graphics. Chyron continues that legacy as a global leader focused on customer-centric broadcast solutions. Today, the company offers production professionals the industry's most comprehensive software portfolio for designing, sharing, and playing live graphics to air with ease. Chyron products are increasingly deployed to empower OTA & OTT workflows and deliver richer, more immersive experiences for audiences and sports fans in the arena, at home, or on the go.

CONTACT SALES

EMEA • North America • Latin America • Asia/Pacific +1.631.845.2000 • sales@chyron.com

